


A3363S-5

MASSAGE CHAIR

Operation Instructions

SAVE THESE INSTRUCTIONS

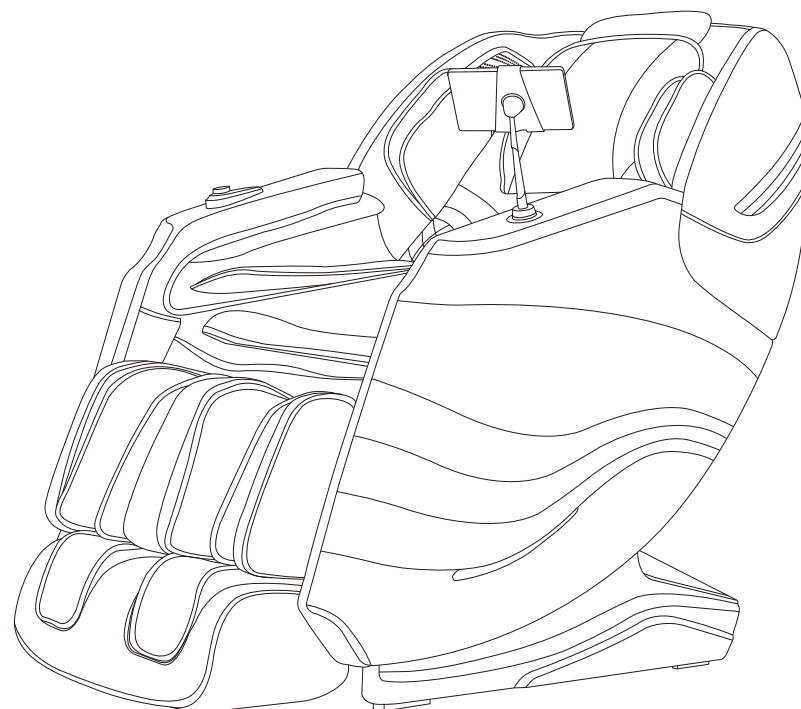

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Safety and Maintenance	02
Safety Warning	04
Name of Components	09
Function	10
Touch screen manual controller interface introduction	12
Method of Usage	14
I. Turn on the power supply of this product	14
II. Massage Function Control Operation	14
III. Introduction to Armrest Shortcut Keys	20
IV. Voice Control Mode	22
V. Turn off power, stop massage	23
VI. Operation Instructions for Bluetooth Speaker Play	23
VII. Calf Installation Instruction	23
VIII. Controller bracket installation instructions	24
IX. Pillow Pad and backrest pad's dismounting and use manual	25
X. Floor Protection	25
XI. Instruction for Movement	26
Product Specification	26

Safety and Maintenance

1. Important Safety Warnings

- Do not allow children to touch any movable part of this product.
- Use the well-grounded power supply unit suitable for this product.
- Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product.
- Operate this product as instructed in this manual.
- Do not use any parts or accessories which are not recommended.
- Do not use this product outdoors.
- Please read the Operation Instructions carefully before operation.
- Never use this product for any other purpose not listed herein.
- 20 minutes of usage each time is recommended.
- Do not use this product if the leather is broken or damaged.
- Do not use this product if the cover or leather is broken or damaged.
- Do not use this product if the radiator hole is covered or blocked.
- Do not drop anything into this product.
- Never fall asleep while using this product.
- Do not use this product if you are drunk or feel unwell.
- Do not use this product within one hour after a meal.
- Do not use this product with excessive force to avoid any injury.
- Do not carry any fragile, explosive, or combustible material in your pocket, such as a mobile phone and lighter when using the massage chair.

2. Operating Environment

- Do not use this product in a very moist environment such as the bathroom.
- Stop using this product immediately when the ambient temperature changes sharply.
- Do not use this product in any heavily-dusty or caustic environment.
- Do not use this product in a small space or a place without good ventilation.
- The normal room temperature ranges from 0 °C to 35 °C.
- Do not use this product in an excessively humid room such as a bathroom. Use it at a relative humidity between 20% and 80%.
- Do not use this product outdoors.
- Avoid direct sunlight.
- Keep this product away from any heat source such as a stove and air outlet of an air conditioner.
- Do not use this product during thunder or lightning weather.
- Do not use this product in dusty places.

3. The following populations should not use this product:

- Patients with osteoporosis.
- Patients with heart disease or wearing electronic medical devices such as a pacemaker.
- People who have a fever.
- Pregnant women or women on their menstrual period.
- Patients who are injured or have a skin disease.
- When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product.
- People who are told by their physicians to have rest or who feel unwell.
- People whose bodies are wet are forbidden to use this product.
- This product has a hot surface. Persons insensitive to heat must pay attention when using this product.

Safety and Maintenance

4. Safety Precautions

- Check whether voltage is consistent with the specification of this product.
- Never insert or pull out the plug with a wet hand.
- Do not let water flow into this product to avoid electric shock or cause damage to this product.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.
- Stop using this product at once while it works abnormal, and consult your local supplier.
- Stop using this product if you feel unwell, and consult your health care practitioner.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this product by the personnel responsible for their safety. Children should be supervised to ensure that they do not play with this product.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified staff in order to avoid hazards.

5. Product Service and Maintenance

- This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not use a sharp object to stab at this product.
- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.

6. Solutions to Ordinary Malfunctions

- If the motor sounds during operation of this product, this is the normal operation sound.
- If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.
- If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.


7. Storage Conditions

- Storage room temperature: -5 °C to 35 °C.
- Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Safety Warning

! Warning

When the legrest of the massage chair is lifted, nobody should apply pressure on the legrest to prevent the massage chair from falling forward which will damage this product or result in personal injuries.

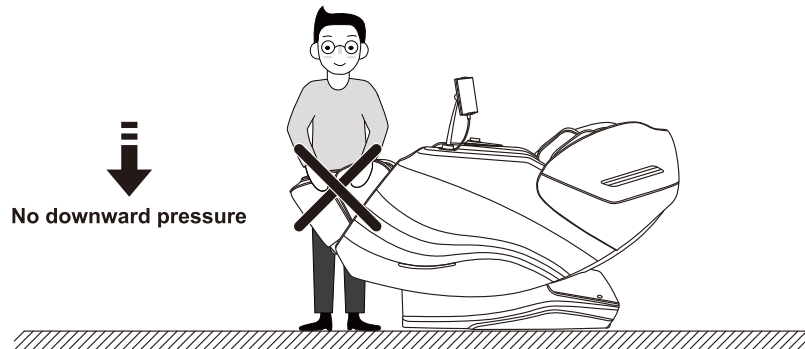

! Warning


Before sitting on the massage chair, make sure that the massage chair manipulator does not stay in the seat cushion position to avoid discomfort to the buttocks during the body pressing down and any damage to the massage chair manipulator.



Safety Warning


! Warning

Do not remove or pull out the remote controller cable or the power cord in the standby or power-on state to avoid any damage to this product or accidental electric shock of a body part. You are advised to unplug the remote controller cable and the power cord and put them away after you use the massage chair.

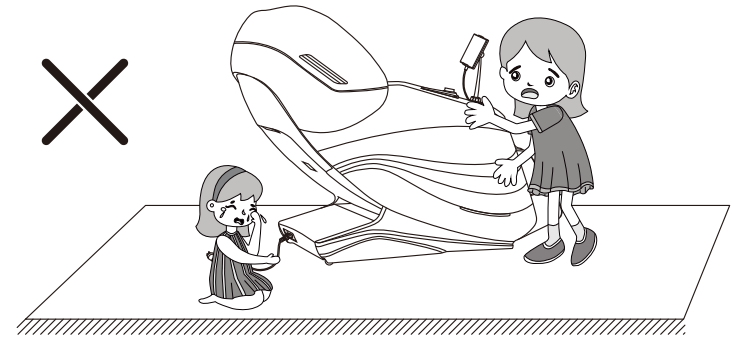

! Warning


When the zero-gravity lying function is enabled, be sure to check whether there is any child or pet staying or playing under the bottom of the legrest and backrest, in order to avoid any damage to this product or physical injury.

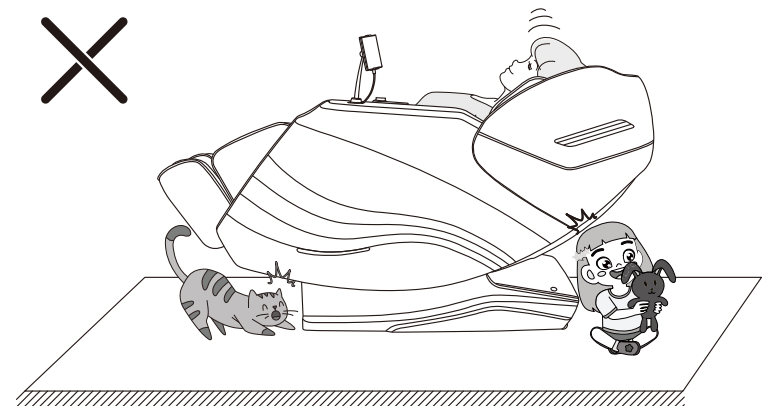

Safety Warning


⚠ Warning

Before using the massage chair, remove any hard objects in your pocket(s) or any jewelry carried with you (e.g. key, watch, other similar portable hard objects) to avoid any damage to this product or physical injury during massage.

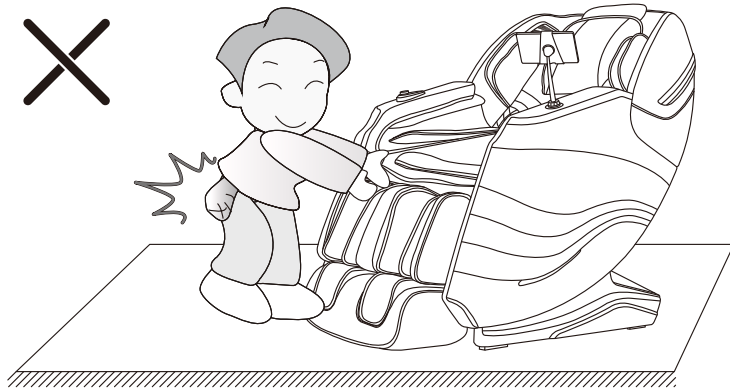

⚠ Warning


Do not unplug the power cord, or directly turn off the power switch on the back of the massage chair during massage, in order to avoid any damage to this product or physical injury.

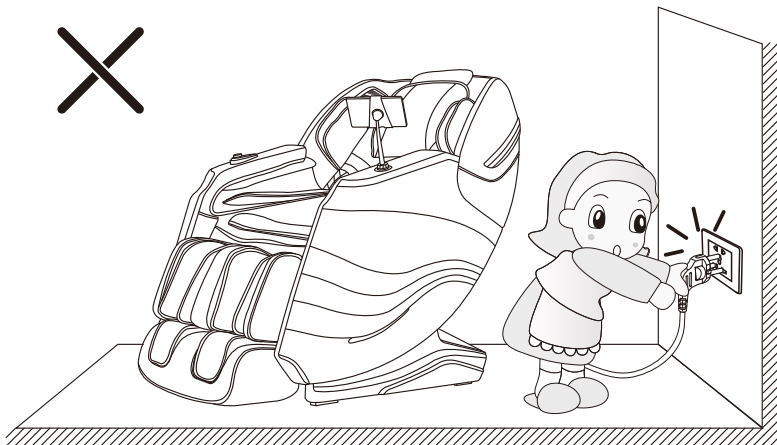

Safety Warning


⚠ Warning

Please do not fall asleep on the massage chair while using to avoid personal injury caused by unconscious use.

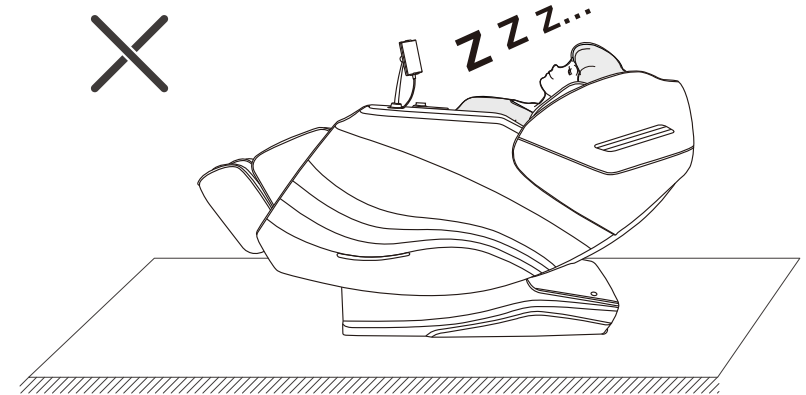

⚠ Warning


The massage chair should not be used by more than two people at the same time to avoid product failure or personal injury. In addition, do not let children play on the massage chair or climb onto the lower leg, seat cushion, foot, backrest or armrest. Otherwise, accidents or injuries may be caused.

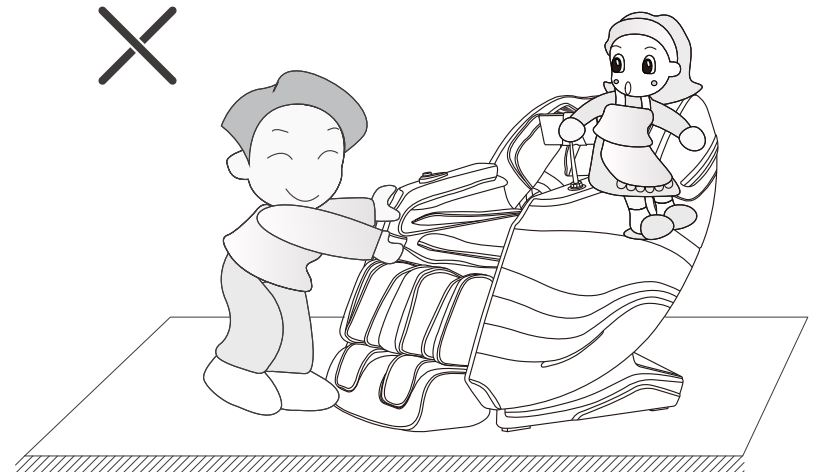

Safety Warning


Warning

When adjusting the footrest retractable function or when footrest is declining, please be sure not to put hard objects (such as keys, mobile phones, Etc.) or put the hand into the gap of the footrest, and the intersection with the armrest; To avoid product damage or personal injury caused during the process.

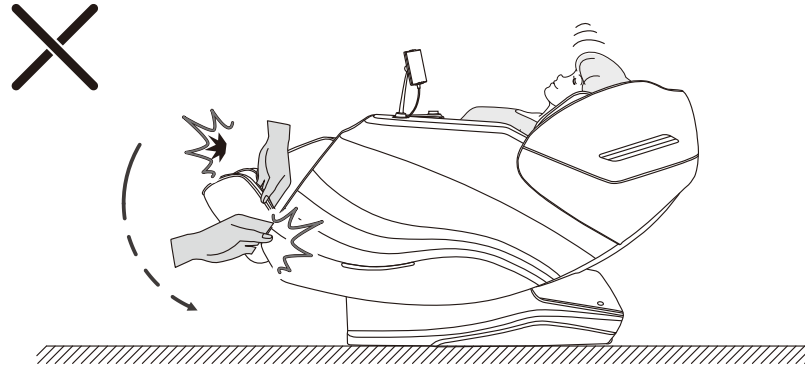


Warning

Before turning on the massage chair, check the surroundings to make sure that there are no people, pets or other objects around the massage chair. Avoid damage to the product or other objects or personal injury during the operation of the massage.

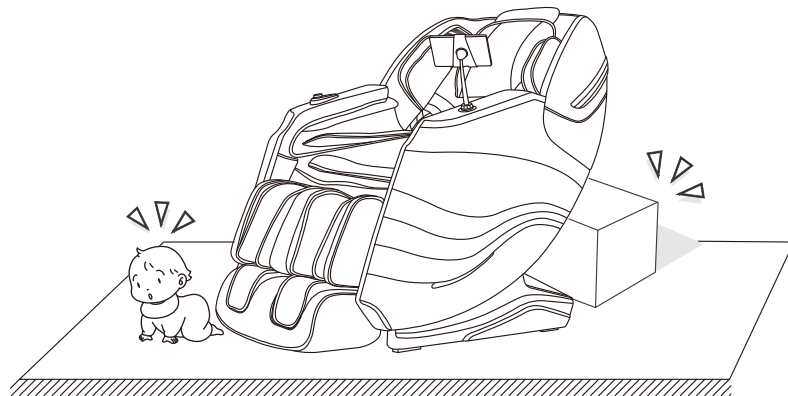

Name of Components

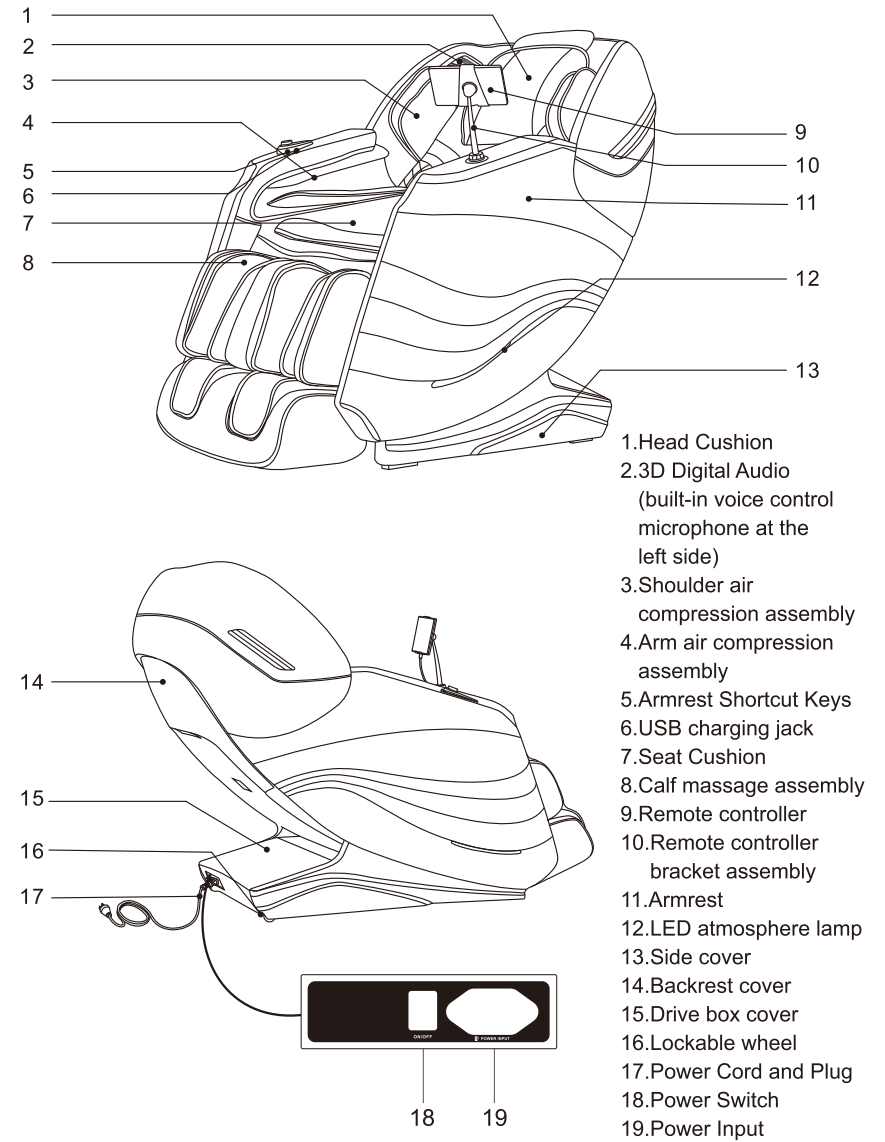

Function


- This product has designed a set of massage manipulator that can walk up and down, four-wheel drive and mute design.
- There are ten simulative massage techniques: Knead, Tap, Knead and Tap, Shiatsu, Knock, Rolling Massage, 4D Tap, 4D knead, 4D Knead and Tap, 4D Shiatsu.
- It is provided with characterized automatic massage functions: Comfort massage, Relax massage, Stretch massage, Neck & shoulder massage, Back & Waist massage, Full body massage, Spine care, Fatigue recovery, Meridian treatment, Sedentary stretch, Goodnight sleep, Leisure wellness, Sports healing, Elderly massage, Body balance, Beauty care. Total eighteen kinds of automatic massage functions.
- The upper body manually selects the massage functions; there are five massage positions to select from including Spot, Partial, Full, Upper and Lower; there are ten simulation massage methods to select from including Knead, Tap, Knead and Tap, Shiatsu, Knock, Rolling Massage, 4D Tap, 4D knead, 4D Knead and Tap, 4D Shiatsu; each massage technique (except rolling massage and 4D Shiatsu) is adjustable to five speeds; in the state of Tap, Shiatsu, Knock, Rolling massage, 4D Tap and 4D Shiatsu, the manipulator massage ball is adjustable of three widths.
- Airbag massage function: Upper air and Lower air. Upper air include shoulder airbag massage and arm airbag massage; Lower air include calf and foot airbag massage. There is five levels of intensity for selection.
- It is provided with an intelligent voice control recognition function.
- Slide rail technology is adopted for lying down of the backrest frame to always make the backrest zero distance from the wall thus saving space to the greatest extent.
- The guide rail of the backrest frame adopts curved guide rail technology, which completely conforms to the back of the human body and makes people enjoy a massage from the head to the thigh.
- Music playing system, with built-in 3D digital audio in the left and right space capsules. The Bluetooth function of intelligent devices can be used for wireless connection to play music.
- It is provided with calf kneading function: kneading and airbag squeezing around the inside and outside of the calves, which can relieve the stiffness or tension of the calf muscles caused by long standing.
- The lower leg frame is provided with a spring retractable adjustment function. Kick out the calf rest with your feet, the length for the user to stretch out his/her feet is dependent on his/her feet and the user stretches back his/her feet by spring force; it is suitable for the use by persons with different heights.

Function

- It is provided with a separate lifting adjustment function for the lower leg frame, linkage lifting adjustment function for the backrest frame and zero-gravity automatic lying angle adjustment function.
- The right armrest is provided with on/off key, linkage adjustment key, AUTO key, voice control button, heat treatment key, air pressure key, Legrest up/down key, zero gravity key, backrest up/down key.
- The foot roller massage function is available for the feet bottoms. Three sets of rollers roll to massage the roots of the toes; rolling and scraping massage is available for the foot arch and heels.
- On the side of the front-end shortcut key of the right armrest is provided with USB charging function.
- The armrests on both sides are equipped with LED atmosphere lamps.
- Equipped with LCD color touch screen controller.
- Automatic sit-up function when the power is off and manipulator automatic reset function.

Touch screen manual controller interface introduction

Note: Specific display is subject to the actual product!

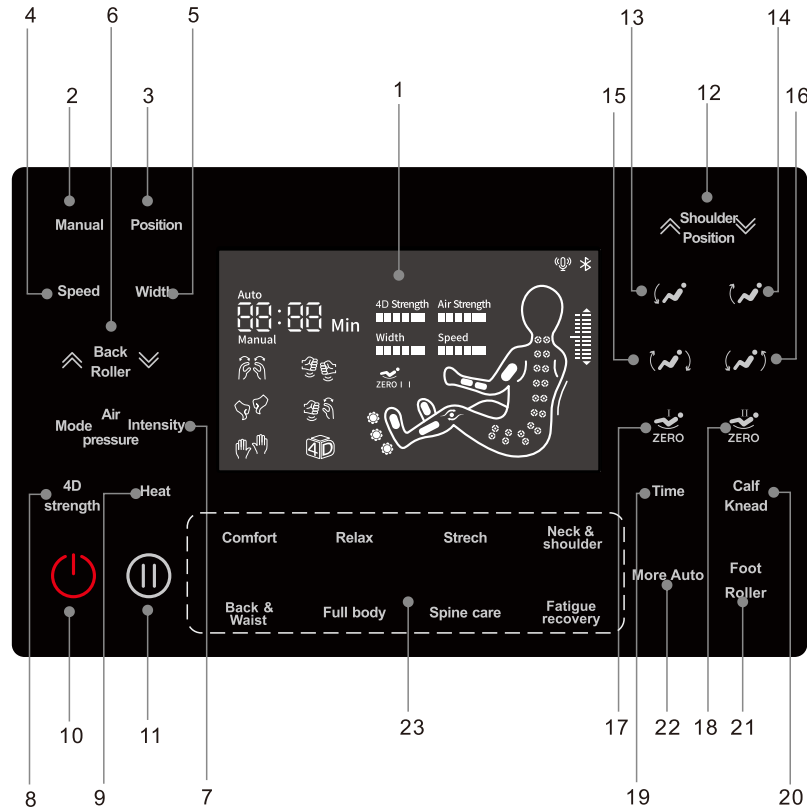

1.LCD Screen

- Display all massage functions.

2.Technique:

- ten simulation massage techniques include Knead, Tap, Knead and Tap, Shiatsu, Knock, Rolling Massage, 4D Tap, 4D knead, 4D Knead and Tap, 4D Shiatsu.

3.Position:

- There are five massage positions to select from: Spot, Partial, Full, Upper and Lower.

4.Speed:

- In the Manual mode, speed is adjustable in five gears.

5.Width:

- In the Manual mode, the width adjustable of three gears for Tap, Shiatsu, Knock and Rolling Massage, as well as Stop functions.

Touch screen manual controller interface introduction

6.Massage robot adjustments:

- The massage robot can be adjusted in the Spot and Partial state.

7. Intensity:

- The function of regulating air pressure intensity

8.4D intensity:

- Adjust 4D intensity. Total five intensity.

9.Heat:

- Turn on / off the heat massage function.

10.Power key:

- Turn on / off the massage chair.

11.Pause:

- Pause / Start the massage function.

12.Shoulder position adjustment:

- Manually adjust the massage shiatsu point of human shoulder position.

13.Calf down:

- Adjust the calf frame down.

14.Calf up:

- Adjust the calf frame up.

15.Seat-down:

- Adjust the backrest frame down and the calf frame up.

16.Seat-up:

- Adjust the backrest frame up and the calf frame down.

17.Zero gravity I:

- Adjust Zero gravity I.

18.Zero gravity II:

- Adjust Zero gravity II

19.Timing:

- The timing time is adjusted by 5 minutes each time. The upper limit is adjusted after 30 minutes, starting from 5 minutes

20.Calf Knead:

- Press this button to start or stop the calf rubbing.

21.Foot Roller:

- Total three intensity can be adjusted.

22.Ten kinds of More Auto mode:


- More auto mode include: Meridian treatment, Sedentary stretch, Leisure wellness, Sports healing, Elderly massage, Body balance, Beauty care, Hip lift, Restoration.

23.Eight kinds of Auto mode display:

- Auto mode display massage function include: Comfort massage, Relax massage, Stretch massage, Neck & shoulder massage, Back & Waist massage, Full body massage, Spine care, Fatigue recovery.



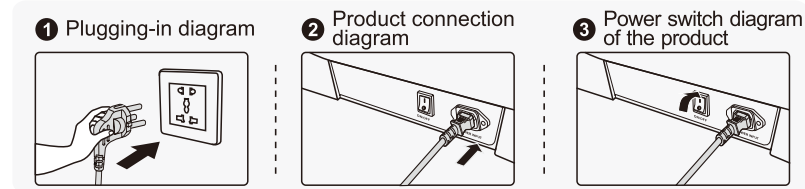

Method of Usage


I. Turn on the power supply of this product



II. Massage Function Control Operation

- ①. Press the power key to start the massage.
- ②. Automatically adjust the angle.
- ③. Automatically detect human shoulder position, keep sitting posture fit with massage chair.
- ④. Conduct fine adjustment of shoulder position. If the detected position deviates from the actual shoulder position, adjust to the proper position by Up and Down keys for shoulder position. Shoulder position is adjustable of 10 gears. If no shoulder position adjustment within 10 seconds, the massage function will be started.

Button	Description	Display
 Shoulder position adjustment (Up key)	Adjust the massage ball position upward so that it reaches the proper shoulder position.	
 Shoulder position adjustment (Down key)	Adjust the massage ball position downward so that it reaches the proper shoulder position.	

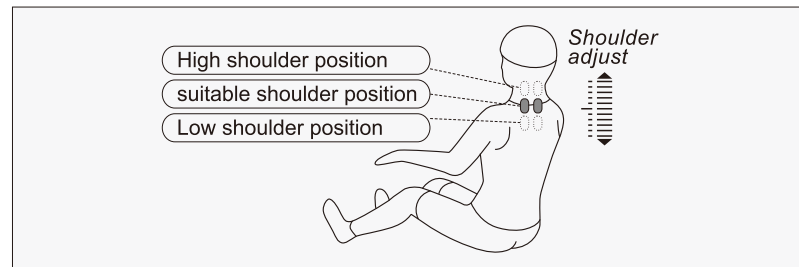

In the process of shoulder position detection (there is a shoulder position adjustment icon displayed on the screen of the controller and the "beep" sound from the controller, meanwhile press Up or Down key to adjust the shoulder position), at this point, you can also press one of the 8 automatic programs, and click again to skip directly and enter the massage mode.

Method of Usage

• Auto Massage

Function	Button	Description	Display
Auto Massage	Comfort massage	The most comfortable massage experience.	Auto 01
	Relax massage	Gentle and comfortable deep massage, which can relieve body fatigue and relax the body.	Auto 02
	Stretch massage	The lower leg frame and the backrest frame are lifted and lowered for stretching and traction of the leg and waist, effectively relieving tiredness, relieving joint soreness and restoring vitality	Auto 03
	Neck & shoulder massage	According to the unique neck and shoulder massage method, through effective massage of cervical spine and scapula, neck and shoulder pain can be relieved and neck and shoulder fatigue can be improved.	Auto 04
	Back & Waist massage	Focus on the back and waist to relieve back and waist soreness	Auto 05
	Full body massage	Deep massage, which can revive body vitality.	Auto 06
	Spine care	Protect the health of the whole spine, and improve the lack of exercise.	Auto 07
	Atigue recovery	Restore the full body from fatigue and pain; achieve relaxation, improve micro-circulation, and quickly relieve fatigue for the back and limbs.	Auto 08

Method of Usage

• More Programs

Function	Button	Description	Display
Auto Massage	More Programs	Meridian treatment:Dredge the channels and collaterals,quickly improve the body's micro-circulation,and enhance immunity.	Auto 09
		Sedentary stretch:Aim to office sedentary group, increase the amount of physical exercise by massage,improve the body function.	Auto 10
		Goodnight sleep:With kneading, shiatsu massage techniques, combined with low-intensity air pressure massage and function, through the 12 health acupoints massage, help to regulate and balance on human body	Auto 11
		Leisure wellness:With cozy massage method, under tender strength and soft rhythm, suitable for the relax and rest.	Auto 12
		Sports healing:Quickly recover the fatigue after exercise.	Auto 13
		Elderly massage:Focus on the back, buttock and thigh massage to relieve the pain and adjust body health situation.	Auto 14
		Body balance:Release pressure,relieve soreness, mental healthcare,relax muscle and improve sleep quality.	Auto 15
		Beauty care:Massage manipulator combine with shoulder airbags,kneading massage focus on neck and shoulder,kneading and tapping massage on back and waist,kneading massage on buttocks, kneading and tapping massage on laps,foot rollers, legs airbags and arm airbags massage started at same time.	Auto 16
		Hip lift:Massage effectively for buttocks and thighs to shape the body and reduce the accumulation of excess body fat.	Auto 17
		Restoration:It is suitable for the elderly, with gentle massage force and gentle action, and also suitable for the vulnerable people.	Auto 18




Method of Usage

• Manual massage


Function	Button	Adjustment of massage ball	Display
Technique	Technique	Knead: Speed.	
		Tap: Speed, Width.	
		Knead and Tap: Speed.	
		Shiatsu: Speed, Width.	
		Knock: Speed, Width.	
		Rolling Massage: Width.	
		4D Knead:Speed.	
		4D Tap:Speed, Width.	
		4D Knead & Tap:Speed.	
		4D Shiatsu:Speed, Width.	
Speed	Speed	Adjustable 5 gears in speed.	
Width	Width	Adjustable 3 gears in width.	
Back Stretch	Mode	Fixed point: Massage in a fixed position.	H0
		Partial: Massage in a small area forth and back.	H1
		Full: massage the full body forth and back.	H2
		Upper back: Massage the upper back forth and back.	H3
		Lower back: Massage the lower back forth and back.	H4
		Massage position adjustment (in Fixed-Point and Partial mode, massage position can be adjusted).	Manipulator Up
			Manipulator Down

Method of Usage


· Airbag massage

Function	Button	Description	Display
Air pressure mode	Air pressure	Full-body Airbag massage: Massage the arms, upper arms, legs and feet with air pressure.	
		Upper body Airbag massage: Massage the arms and upper arms with air pressure.	
		Lower body Airbag massage: Massage the legs and feet with air pressure.	
Air pressure intensity	Intensity	Adjustable of five gears.	Air Strength 
	4D Intensity	Adjustable of five gears.	4D Strength 


· Heat massage

Function	Button	Description	Display
Heat	Heat	Press this key to turn on or off the Shawl heating function	


· Sole roller massage

Function	Button	Description	Display
Sole roller	Sole roller	Press this key to turn on / off sole roller massage and it is adjustable of three gears in intensity, namely weak, medium and strong, it can be switched cyclically among three gears and Off states.	

· Timing







Function	Button	Description	Display
Timing	Timing	For timing adjustment, every time you press the key, it increases by 5 minutes, but cannot be increased to more than 40 minutes, and it returns to the lowest time value if more than 40 minutes.	

· Calf Knead

Function	Button	Description	Display
Calf knead	Calf knead	Press this button to start or stop the calf rubbing	


Method of Usage

· Angle adjustment

Function	Button	Description
Seat-up key		Press and hold this key, the backrest frame rises slowly, the calf frame descends slowly, accompanying the sound of "beep... beep..." until reaching the top, if the key released the frames stop.
Seat-down key		Press and hold this key, the backrest frame moves down slowly, the calf frame moves up slowly, accompanying the sound of "beep... beep..." until reaching the bottom. If the key released the frames stop.
Calf frame Up		Press and hold this key, the calf frame rises slowly accompanying the sound of "beep... beep..." until reaching the top, if the key released the frames stop.
Calf frame Down		Press and hold this key, the calf frame moves down slowly, accompanying the sound of "beep... beep..." until reaching the bottom, if the key released the frames stop.
Zero I		Zero-gravity key I : the positions of the legrest and the backrest can be automatically adjusted to the positions I for zero gravity.
Zero II		Zero-gravity key II : the positions of the legrest and the backrest can be automatically adjusted to the positions II for zero gravity.

Method of Usage

III. Introduction to Armrest Shortcut Keys

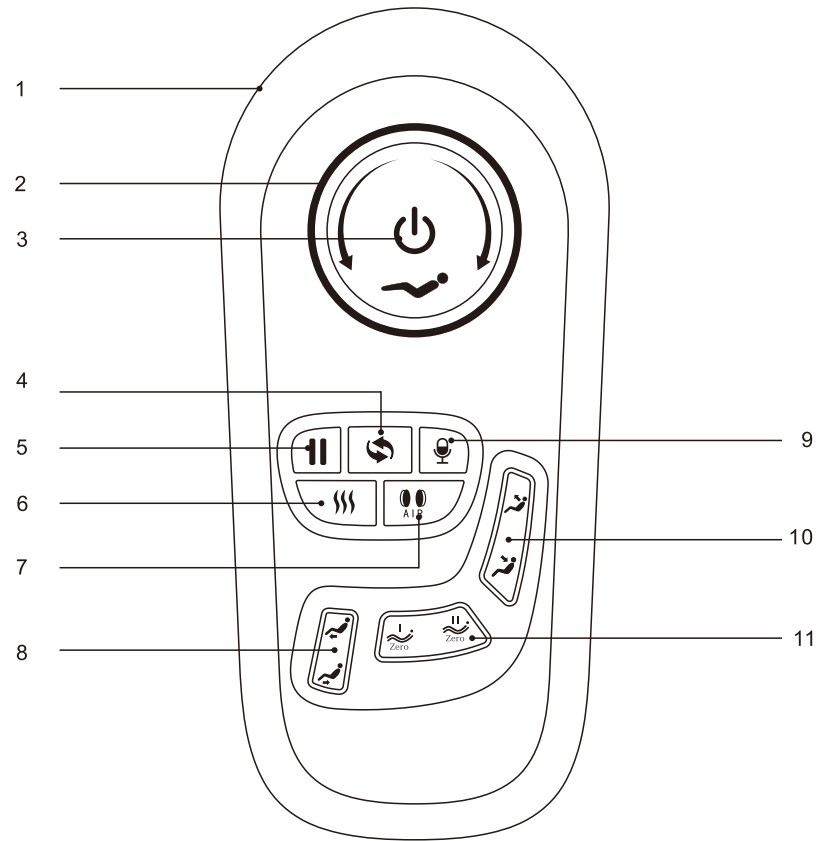

- 1.USB charging jack: or intelligent device charging.
- 2.Adjust key: adjust the up or down of the backrest frame and the calf frame interactively.
- 3.On/Off key: turn the massage chair on/off.
- 4.Auto key: switch from/to the automatic massage function.
- 5.Pause key: suspend all massage functions.
- 6.Heat key: turn the heat function on/off.
- 7.Air: turn the pneumatic massage function on / off.
- 8.Calf frame Up and Down key: adjust the up or down of calf frame.
- 9.Voice wake up button: short press this button to wake up the voice control function.
Long press 3 seconds to open/close voice control function.
- 10.Backrest frame Up and Down key: adjust the up or down of the backrest frame.
- 11.Zero Gravity key: adjust massage chair to the zero gravity angle.

Method of Usage

Function	Description
	USB jack: USB charging port, you can charge smart devices (such as mobile phones).Open key: short press this key to open key.
	Power key: Short press this key to turn ON/OFF the massage.
	Linkage lying knob: By rotating this knob clockwise, the backrest will move downward slowly and the legrest will rise slowly; by releasing it, such DOWN/UP action of the backrest and the legrest will be stopped.
	Linkage sitting knob: By rotating this knob counterclockwise, the backrest will rise slowly and the legrest will move downward slowly; by releasing it, such UP/DOWN action of the backrest and the legrest will be stopped.
	Press this key during massage, and all the massage actions will be suspended at once. (i.e. the massage chair will turn off after 20min). Then press this key again to restore all the previous massage actions.
	Auto mode key: each time the key is short pressed, it will be switched to next automatic massage function.
	Voice wake up button: short press this button to wake up the voice control function. Long press 3 seconds to open/close voice control function.
	Heat treatment key: Click the key to enable or disable the heat treatment function.
	Air pressure key: press this button to switch the air pressure mode
	Legrest up key: Pull the button to make the legrest rise slowly. Release it to stop such action.
	Legrest down key: Press the button to make the legrest move downward slowly. Release it to stop such action.
	Zero-gravity key I : the positions of the legrest and the backrest can be automatically adjusted to the positions I for zero gravity.
	Zero-gravity key II : the positions of the legrest and the backrest can be automatically adjusted to the positions II for zero gravity.
	Backrest up key: the back rest keeping lifting when pressing this key, and black rest stopped lifting once release the key.
	Backrest down key: the back rest keeping reclining when pressing this key, and black rest stopped reclining once release the key.

Method of Usage

IV.Voice Control Mode

- When the massage chair is turned on or in standby mode, the sound "Hi Alice" or "Hey Alice" will be produced to enable the voice control function. Alternatively, you can press the voice control button on the armrest to enable the voice control function.
- Press and hold the zero gravity key of the manual controller for 3 seconds to turn on or off the voice control function.
- After such function is enabled successfully, the massage chair will reply "I am here." At this moment, once a corresponding voice control entry to be implemented is given within six seconds, the corresponding voice control function can be performed after a reply is received from the massage chair; if no correct voice control entry is given within six seconds, the voice control function automatically will be off automatically and needs to be enabled again.
- Note: When waking up the voice control function, please use English, the speech rate is moderate, Voice commands should follow the Voice entry.


Voice Control Entry		
Entry: "Hi Alice" or "Hey Alice". Answer: I am here.		
No.	Voice control entry	Answer entry
1	Massage on	Answer: Ok, massage on
2	Massage close	Answer: Ok, massage close
3	Comfort Massage	Answer: Ok, comfort massage
4	Relax massage	Answer: Ok, relax massage
5	Full body massage	Answer: Ok, full body massage
6	Neck and shoulder massage	Answer: Ok, neck and shoulder massage
7	Back and waist massage	Answer: Ok, back and waist massage
8	Stretch massage	Answer: Ok, stretch massage
9	Open the air pressure	Answer: OK, open the air pressure
10	Close the air pressure	Answer: OK, close the air pressure
11	Up the seat position	Answer: Ok, up the seat position
12	Down the seat position	Answer: Ok, down the seat position
13	Change the other mode	Answer: Ok, change the other mode
14	Go little down	Answer: Ok, go little down
15	Go little up	Answer: Ok, go little up

Remark: Command 11 and 12 can only be used in state of fixed position massage. They can use after command 9 or 10.

Method of Usage

V. Turn off power, stop massage

- During the massage process, press the power switch key to immediately turn off all massage functions, the seat back and the foot pad are reset, the massage time is up, and all massage functions are immediately turned off, and the seat back and the foot pad are not reset.
- Cut off the power supply of the whole machine, the figure (schematic diagram of the whole machine power cut).

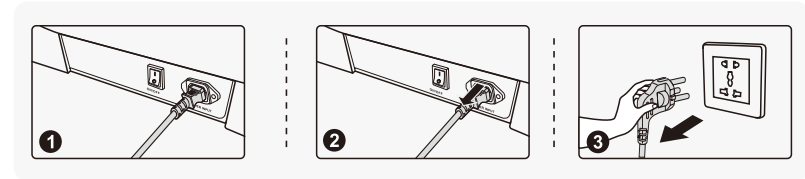


- ① Schematic diagram of the whole machine power turning off.
- ② Schematic diagram of unplugging the whole machine wiring.
- ③ Schematic diagram of unplugging the power plug.

VI. Operation Instructions for Bluetooth Speaker Play

1. Enter the smart device manual and open the Bluetooth function to search the new Bluetooth devices.
2. Will find the bluetooth named like (IMCM-XXXX), choose it to pair with the chair.
3. Turn on the Music Player in the smart device.


VII. Calf Installation Instruction

- After connecting the wires and the air hose between the legrest and the massage chair, remove the cable ties and insert the connecting part into the seat (Figure 1).
- Place the round tubes on the left and right sides of the legrest onto the legrest support (Figure 2).

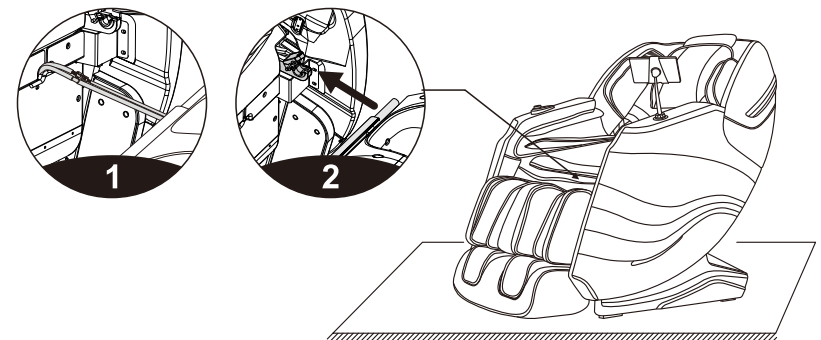


Method of Usage

- Next, turn the legrest fixing cover over to cover the round tubes on both sides of the legrest (Figure 3).
- Fasten the legrest to the massage chair with two M4 screws (one on each side). Check whether there is any abnormality during turning up and down, or any tube, cable or wire is folded. If everything is OK, the legrest is installed (Figure 4).

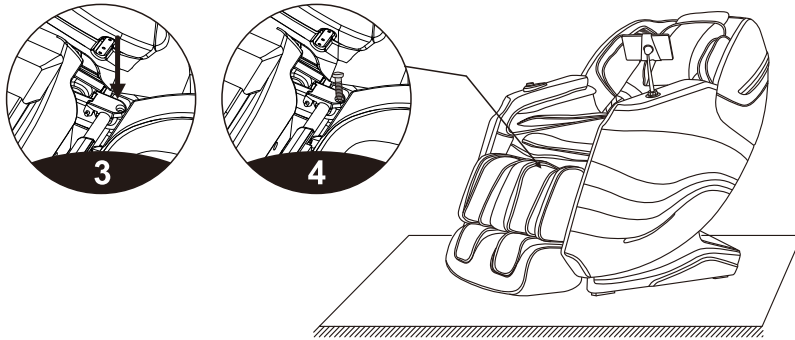

VIII. Controller bracket installation instructions


After the screw thread on the support knob of the controller rest assembly aligns to the screw thread position of the support mounting seat on the armrest of the massage chair, just turn clockwise and screw tightly for fixation.

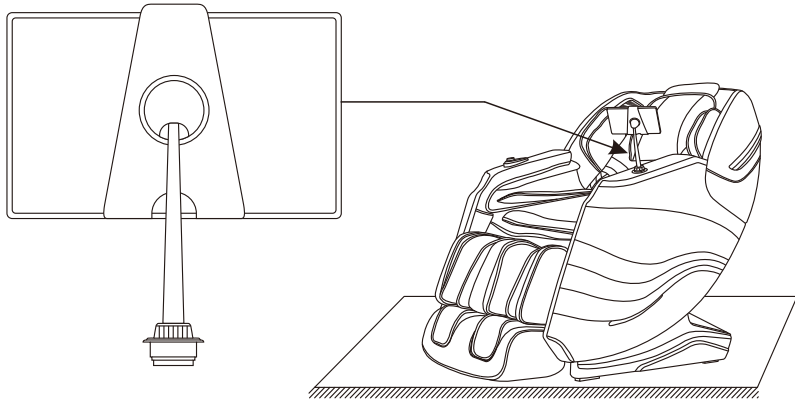

Method of Usage


IX. Pillow Pad and backrest pad's dismounting and use manual

- The use of the head cushion can reduce the intensity of kneading massage on the neck and shoulders. You can decide whether to use the head cushion according to your own needs (the head cushion is recommended). The backrest and the back cushion are connected by a zipper (1). The head cushion and the backrest are connected by a zipper (2).

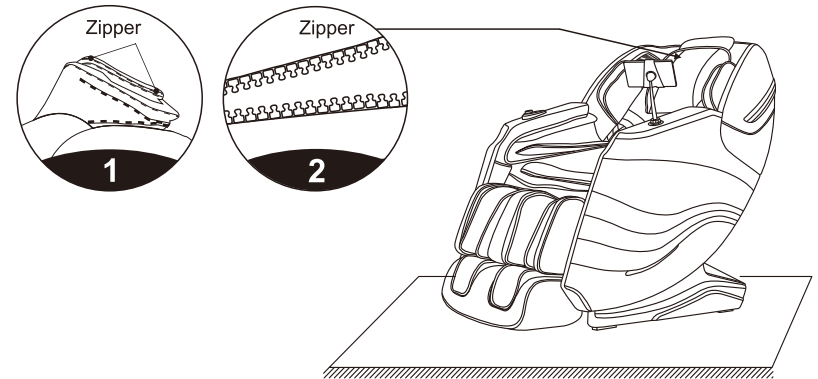

X. Floor Protection

- The prolonged heavy pressure on the massage chair may cause scratches on the floor. Thus, put a carpet or cushion on the floor where the massage chair is placed to avoid this damage.

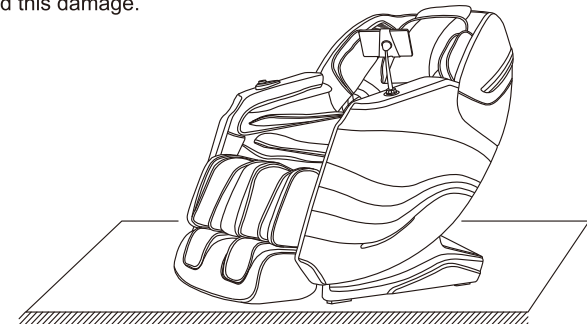


Note: Do not move the massage chair with its wheels on the rough ground or in a narrow space. At least two persons are required to lift it. During lifting, take the legrest sealing plate and backrest cover grooves as the acting points. (Do not lift the armrest directly.)

Method of Usage

XI. Instruction for Movement

- Make sure that all the wires are pulled away from the massage chair surface; then press the backrest down to a certain angle (with the center of gravity resting on the wheels), you can push the massage chair forward with hands, move it to a suitable position and gently restore it to the normal angle. (Note: During movement, you must turn off the power button first and then unplug the power cord and the remote controller connection wire.)

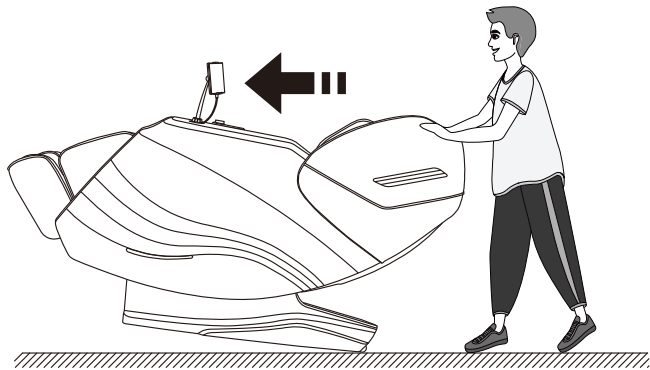

Warning : The rear moving wheels of the massage chair are only suitable for short-distance and slow movement. For long-distance transportation, please use other auxiliary moving tools to move this massage chair!

Product Specification

Model: A3363S-5
Name: Massage Chair
Rated voltage: 220-240V~ 50Hz/60Hz
Rated power: 140W
Rated time: 20min
Safety structure: Class I

Material description: PVC, PA, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD